



5 YEAR
WARRANTY

WEIGHTED WARMTH

WEIGHTED THROW BLANKET
WITH HEAT



USER MANUAL
MODEL: PEHTWGHT-G

IMPORTANT SAFETY INSTRUCTIONS DO NOT DESTROY

DANGER: TO REDUCE THE RISK OF BURNS, ELECTRIC SHOCK, FIRE, AND PERSONAL INJURY, THIS PRODUCT MUST BE USED IN ACCORDANCE WITH THE FOLLOWING INSTRUCTIONS:

1. BE SURE TO READ CAREFULLY THE ACCOMPANYING INSTRUCTION BOOKLET BEFORE USING THIS BEDDING.
2. DO NOT USE THIS BEDDING WITH AN INFANT, AN IMMOBILE PERSON, OR ANYONE INSENSITIVE TO HEAT, SUCH AS A PERSON WITH POOR BLOOD CIRCULATION.
3. DO NOT TUCK IN THE WIRED AREA OF THIS BEDDING.
4. DO NOT ROUTE ELECTRICAL CORDS BETWEEN THE MATTRESS AND BOX SPRING. DO NOT ALLOW THE CORDS TO BE PINCHED.
5. KEEP THE CONTROL AWAY FROM DRAFTY AREAS THAT MAY BECOME DAMP OR WET SUCH AS AN OPEN WINDOW.
6. DO NOT USE PINS – THEY MAY DAMAGE THE ELECTRIC WIRING.
7. BE SURE THAT THIS BEDDING IS USED ON AN ALTERNATING-CURRENT SUPPLY CIRCUIT OF THE PROPER VOLTAGE.
8. TURN OFF OR UNPLUG WHEN NOT IN USE.


9. EXCESSIVE HEATING MAY RESULT FROM FOLDING BEDDING, OTHER THAN A MATTRESS, WHEN IN ACTUAL USE.
10. IF IMPROPER OPERATION OF THIS BEDDING IS OBSERVED, DISCONTINUE ITS USE IMMEDIATELY AND CONSULT THE MANUFACTURER OR THE DEALER REGARDING ITS REPAIR. DO NOT USE WITH ROCKING CHAIRS, RECLINERS, CHAIRS WITH CASTERS OR WHEELS, OR OTHER FURNITURE SUBJECT TO MOVEMENT.
11. DO NOT TUCK THE BLANKET OR SUPPLY CORD IN A SOFA OR OTHER FURNITURE. ALL PORTIONS OF THE BLANKET OR CONTROLLER SHOULD BE VISIBLE AT ALL TIMES.
12. WRAPPING OF CORD AROUND THE CONTROLLER MAY DAMAGE THE CORD. LOOP LOOSELY WHEN STORING.
13. NOT FOR HOTEL, MOTEL OR OTHER INSTITUTIONAL USE.
14. THIS BLANKET HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE. THIS PLUG WILL FIT INTO A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.
15. DO NOT DRY CLEAN THIS BEDDING. CLEANING SOLVENTS MAY HAVE A DETERIORATING EFFECT ON THE INSULATION OF THE HEATING ELEMENT.
16. SAVE THESE INSTRUCTIONS

INTRODUCTION

Thank you for purchasing the Weighted Warmth Weighted Throw Blanket with Heat from Pure Enrichment. Our first-of-its kind throw cuddles you back with calming weighted pressure and therapeutic heat that work together to support better relaxation.

USING WEIGHTED WARMTH WITH HEAT

Attach the Blanket Connector to the Control Connector. Push both parts together securely to ensure a tight fit.

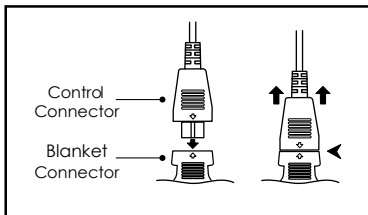

NOTE: The Control Connector must be connected to the Blanket Connector before plugging the unit into an electrical outlet.

After connecting the Blanket Connector to the Control Connector, plug the unit into a 120V AC electrical outlet.

To turn on, press the power button. Select the desired heat setting by continuing to press the power button until the heat indicator light is the color of your desired heat setting:

Green=Warm
Yellow=Low

Orange=Medium
Red=High

To turn off, press the power button one more time.

NOTE: The “high” indicator light will blink red when an error occurs. If this happens, unplug the blanket from the electrical outlet. Check the physical condition of the cord, the wall outlet, and the connection between the Control Connector and the Blanket Connector. If blinking persists after you confirm a proper connection, email help@pureenrichment.com.

USING WEIGHTED WARMTH WITH HEAT (CONT'D)

NOTE: If the blanket does not turn on when you press the power button, make sure the Control Connector is securely plugged into the Blanket Connector.

To turn off, scroll through all the heat settings until the heat indicator light turns off.

AUTO-OFF FEATURE

To conserve energy and prevent skin burns caused by excessive use, this blanket includes an auto-off feature. It will turn off automatically after two hours of continuous use. The red auto-off light will blink when this feature is activated.

NOTE: After a power outage, the timer on the auto-off feature will automatically reset.

USING WEIGHTED WARMTH WITHOUT HEAT

Weighted Warmth can be used solely as a weighted throw if you do not desire the heating function. Simply disconnect the controller for easy, untethered use.

CLEANING INSTRUCTIONS

To prolong the life of your Weighted Warmth throw blanket, occasional spot cleaning may be necessary. Follow these instructions to preserve the softness of the fabric and protect the electrical components:

1. Prepare a cleaning solution with 1 cup lukewarm water and 1/4 tsp mild detergent.
2. Dip a clean cloth into the cleaning solution and use circular and diagonal motions to remove the stain.
3. Rinse the cloth with water to remove any detergent and use the rinsed cloth to remove any remaining cleaner from the blanket.
4. Allow the treated area to air dry before use.
5. DO NOT machine wash.
6. DO NOT allow electrical components to get wet.

PRODUCT SPECIFICATIONS

Blanket Size:	50" x 60"
Power Supply:	AC: 120V, 50Hz, 100W
Blanket Material:	Micromink (Top); Sherpa (Bottom)
Auto Shut-Off Timer:	120 minutes
4 Heat Settings:	Warm—temperature range (~90° F) Low—temperature range (~95° F) Medium—temperature range (~100° F) High—temperature range (~105° F)

WARRANTY

Weighted Warmth comes with an industry-leading 5 Year Warranty that begins on the date of purchase.

The warranty applies to the weighted throw blanket and necessary parts and labor relating thereto. The warranty does not apply to damage resulting from failure to follow the operating instructions, accidents, abuse, alterations, or disassembly by unauthorized individuals.

PRODUCT REGISTRATION

To ensure your full warranty and to receive product updates and streamlined customer support, remember to register your product at:

www.pureenrichment.com/productregistration

ARE YOU 100% SATISFIED?

If you have product questions or concerns don't hesitate to contact us directly at:

help@pureenrichment.com

Pure Enrichment has an award-winning warranty, exchange, and customer service program that guarantees hassle-free solutions to any issue you might have within 24 hours!

FCC NOTICE

Model: Weighted Warmth Weighted Throw Blanket with Heat (PEHTWGHT-G)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Pure Enrichment
14505 Astronautics Lane
Huntington Beach, CA 92647
www.pureenrichment.com

The product is protected against unauthorized use. DO NOT modify it without the authorization of the manufacturer, or the user's authority to operate could be voided.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Huntington Beach, CA 92647
www.pureenrichment.com

REV: 10-2019