


Quick set up guide:

TOKK™ Translator ai10

A. Prepare Translator ai10

1. Peel the Protective layer on the front of the device.
 2. Charge the device using the provided cable (charging pin 2).
 3. Connect your Translator ai10 to your phone via Bluetooth.
- Press **1** to activate the device. Open Bluetooth on your phone and Select Ai-xxx to pair the device.

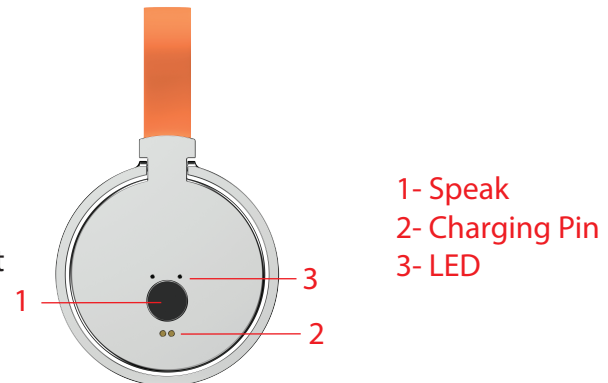

B. Download the Free “FunEase” App

1. Download the “FunEase” from the App store or Google Play store. Install the App and follow the prompts.
- Allow the access to: Microphone, Bluetooth Device and agree on terms.

To use all the features of TOKK™ Translator ai10 follow the following steps.


- Open the App and right swap the small window.
- Press **1** to wake up the Device (LED blue light on **3**). To check the battery level of ai10 look at the upper right corner of the App.

Translation

- Switch on: Translate **C**, Broadcast **D** and **E** if you only want to display the translation.
- .-Select your language **A** and the desired translated language **A+**
- Press and hold **1** on ai10 to dictate and release when you have finish talking.

Dictate in your language and ai10 will translate and paste in an email, a text, WhatsApp or any other apps in the chosen translated language.

- Switch on: Cross application **F** and Translate **C**
- Options: Switch on Broadcast **D** (to hear the translation) and switch on **E** if you want only to display translation.
- Select your language **A** and the desired translated language **A+**
- Open a new email or text or any other App
- Press and hold **1** on ai10 to dictate and release when you have finish talking, and Allow Paste prompt.

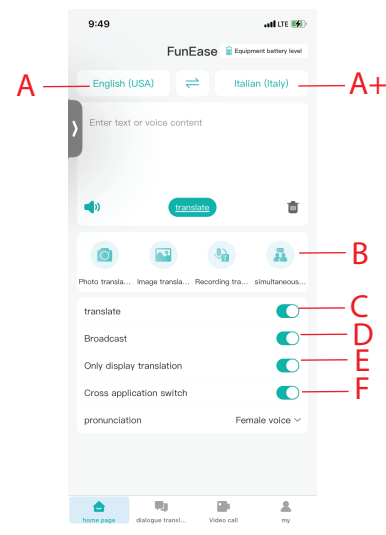

Translate Audio from a Video, voice message, Youtube or other from any language into your selected language.

- Switch on: Cross application **F**, Translate **C** and Broadcast **D**
- Turn off **E**.
- Select original language **A** of the Audio/Video source and select translated language **A+**
- Open the Audio/Video source and play it while pressing and holding **1** on your ai10 device.
- Pause the Audio/Video source and stop pressing **1**, then you will hear the translation.