



AI + TRANSLATION EARBUDS

USER MANUAL



Product Name: TALKX
Model #: AST123

Richwoods Technology Inc.

www.azpenpc.com

Section 1: Product Introduction

Speak, translate, and understand—anytime, anywhere. TalkX simplifies your day with smart voice control and real-time translation. Whether you're traveling, watching movies, taking meeting notes and listen music. TalkX keeps you connected and in command.

Section 2: Touch Control Guide




No.	Function	Operation Description	Prompt Sound	LED Indicator
1	Power On	Long press earbud touch area for 5 seconds	Power on	White and green lights flash alternately
2	Power Off	Long press earbud touch area for 5 seconds	Power off	White light stays on 1s then turns off
3	Waiting for Connection	Main earbud is in standby waiting to connect	/	Main: green light fast flash; Secondary: slow flash
4	Connected	Select the Bluetooth name on your phone to connect	Connected	Main: flashes once every 5s
5	Disconnected	Bluetooth disconnected from phone	Disconnect	Main: green light fast flash; Secondary: slow flash
6	Play/Pause Music	Single tap either earbud touch area	/	Main: flashes once every 5s
7	Next Track	Double tap either earbud touch area	/	/
8	Previous Track	Triple tap either earbud touch area	/	/
9	Voice Assistant (Siri, etc.)	Quadruple tap either earbud touch area	/	/
10	ANC Mode Toggle	Long press either earbud touch area for 2 seconds	/	/
11	Auto Reconnect	Auto reconnect after reboot	Connected	Main: flashes once every 5s
12	Phone Battery Display	Battery level visible on phone when connected (in playback mode)	/	/
13	Volume Sync with Phone	Volume syncs with phone after connection	/	/

No.	Function	Operation Description	Prompt Sound	LED Indicator
14	Auto Power Off (No Connection)	Auto shutdown after 5 min without connection ($\pm 30s$)	Disconnect	Main: green light fast flash; Secondary: slow flash
15	Auto Reconnect After Distance Drop	If disconnected due to distance, reconnects within 1 min when within 10m	Disconnect	Main: flashes once every 5s
16	Answer/Hang Up Call	Single tap left or right earbud	/	/
17	Reject Incoming Call	Long press left or right earbud	/	/
18	Earbud Charging	Place earbuds into charging case	/	White light stays on, turns off when full
19	Charging the Case	Charge with Type-C cable	/	Green light stays on, off when full
20	Case Discharging to Earbuds	Case charges earbuds while inside	/	White light stays on, off when full

Section 3: Downloading the App/Account Creation

3.1 App Installation

Go to the App Store and download the "Vobot Talk" App

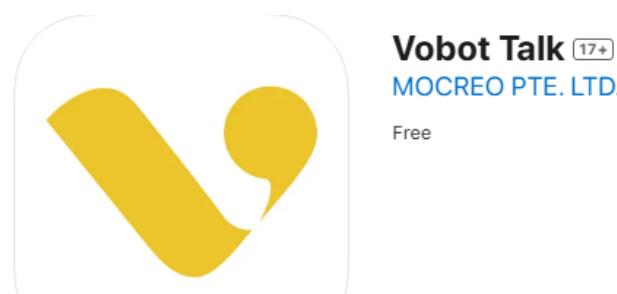


Scan this QR code to download if you cannot find:




Registration:


Step 1: Click “Create a New Account” to go to the Vobot Talk registration page. Make an email/password for the account and hit “Continue”.

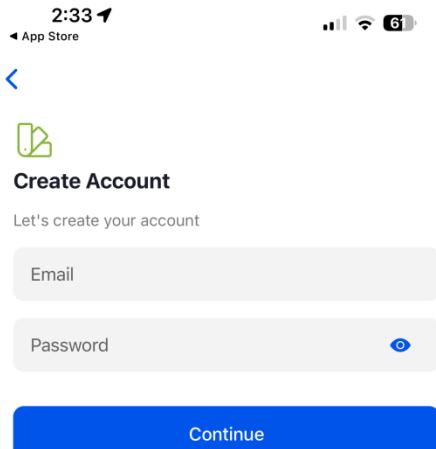

Step 2: It will email you a verification code, type it in to proceed.

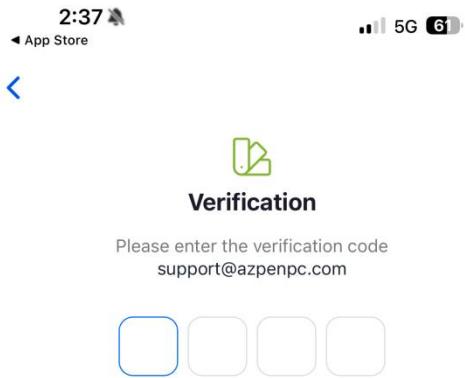

Step 3: Click sign in to complete registration.

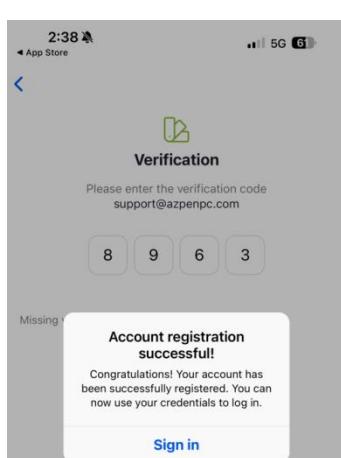

Section 4: Power

Power on

The earbud will automatically power on after taking out from charging case.

Power off

Place the earbud in the charging case, close the cover.

Note: Automatic power off when battery is low.

Section 5: Add Device by Bluetooth

Step 1: Go to Settings > Bluetooth and turn on Bluetooth.

Step 2: Place your TalkX in discovery mode by taking out the earbuds to search. (Make sure they are charged)


Step 3: Wait for the earbuds T123 to appear on your device > Tap earbuds T123 to pair it





Section 6: Add Device by App

Step 1: Make sure app is "Vobot Talk" App is open and Section 2 is completed

Step 2: Go to + Bind New Device

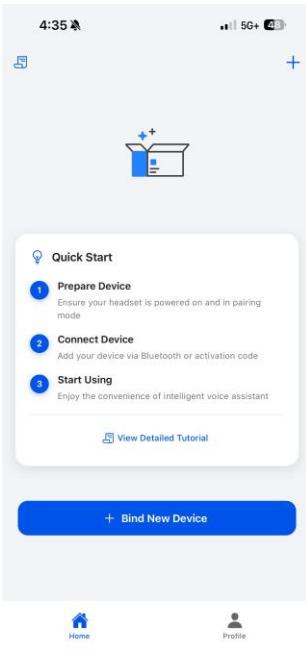


Step 3: Select QR Activation: Scan the Unique QR code below, **BE SURE TO KEEP THIS QR CODE & ACTIVATION CODE FOR FUTURE USE!** or enter the activation code. Make sure to not throw away this manual as may need in the future. The input content is case sensitive (applicable to scan version).

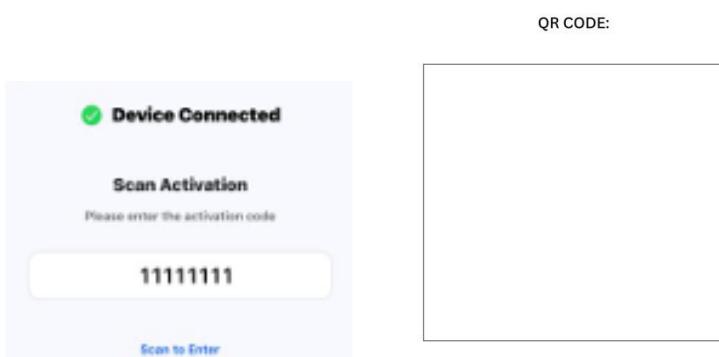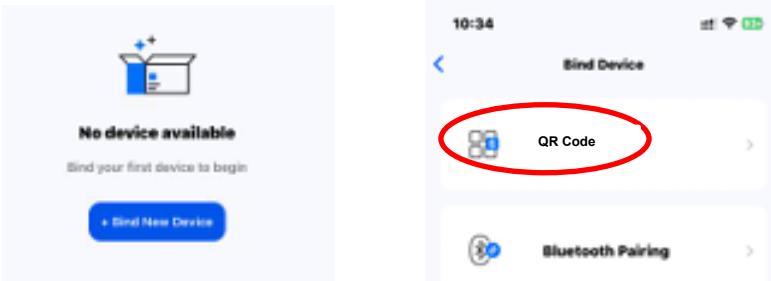

***NOTE: Activation must be completed by scanning the QR code within the app. Bluetooth connection alone will not enable activation.**

Step 4: Follow the prompts to connect and you will see your device when connected

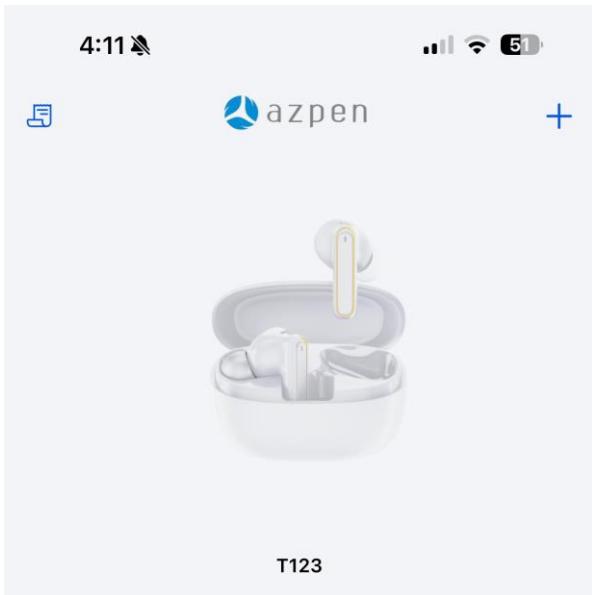


Section 7: Reconnect the Device


Method 1: In the power off state, press and hold the left and right function keys for 3 seconds to turn on the device and automatically enter the pairing mode,

Method 2: Open your phone to search for the Bluetooth device name, click on the device name "T123" to connect and complete the connection;

Method 3: Take out the earbuds from charging case, it will automatically enter the pairing mode, open the phone to search for the Bluetooth device name T123, click on the device name T123 to connect, and complete the connection;

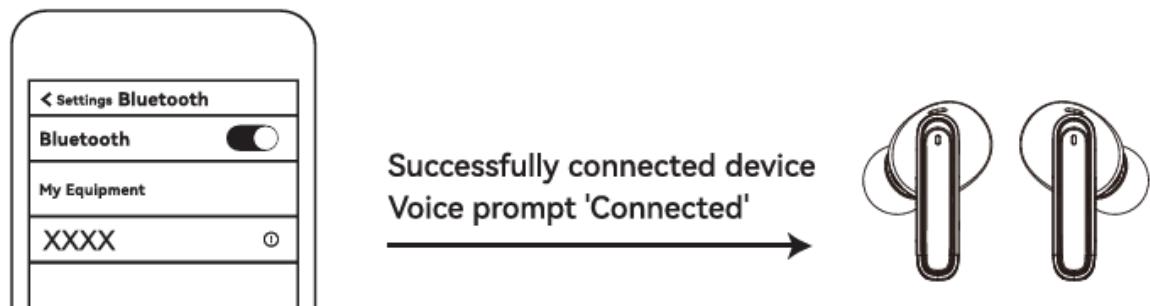

Section 8: Using the Device

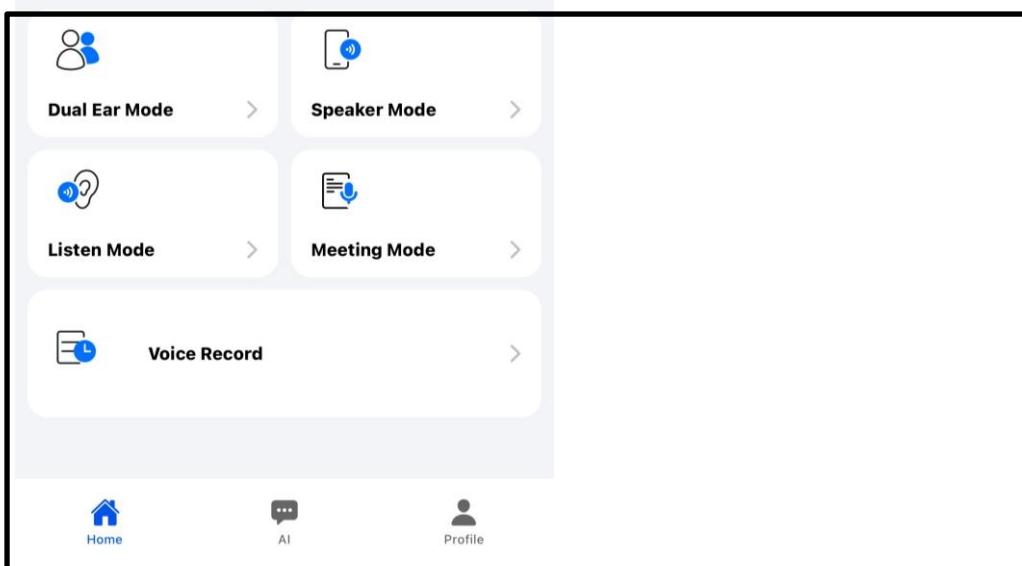

These are the modes^

Mode 1- Simultaneous Translation - Dual Ear Mode:



This mode is ideal for formal one-to-one interactions. It is best used in quiet environments, with each person wearing one earbuds to enable hands-free communication.

Instructions:

Step 1: Select "Dual Ear Translation" from the home page and allow microphone and other permissions.

Step 2: Click to switch languages for left and right earbuds (default: language set in the app).


Step 3: During communication, switch left and right earbuds languages using the interaction button.

Step 4: Adjust font size, speech speed, and volume in the settings.

Features:

- Suitable for formal 1-on-1 communication.
- Fully automatic speech detection and translation.
- Recommended for quiet environments.

Mode 2- Simultaneous Translation - Speaker Mode:

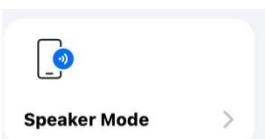

After speaking, the phone plays the translation. When the other person replies, and the earbuds play the response.

Instructions

Step 1: Select "Speaker Mode" from the home page and allow permissions.

Step 2: Choose languages for earbuds and phone.

Step 3: Press or long-press the button to start recording.

Step 4: Tap to start recording, and it will automatically detect silence, or tap again to end.

Step 5: When long-pressing to record, release to stop.



Mode 3- Simultaneous Translation - Listen Mode:



In this mode, it will automatically pick up other languages and translate them into your selected language.



Instructions

Step 1: Select "Listen Mode" and allow microphone.

Step 2: Choose the language you want to translate.

Step 3: To end the session, simply click the stop button.

Mode 4- Live Transcription

The app will transcribe the spoken content. This feature helps users quickly record meeting notes and transcribe dialogues.

Instructions

Step 1: Select "Live Transcription" from the home page and allow microphone permissions.

Step 2: Select the speaker's language in the top-right corner (default: app's current language).

Step 3: Tap the record button to start recording.

Step 4: Tap again to stop recording.

nobody cares nobody cares if you suffered some discrimination you have to remember that whatever you've gone through it pales in comparison to the hardship previous generations endured and they overcame up and if they overcame them you can overcome

Democratic nominee for President of the United States, Hillary Clinton, and Republican nominee for President of the United States.

Hosting us.

The central question in this election is really what kind of country we want to be and what kind of

Usage Tips

Save current recording and result

link

grandd about t econo those a jobs, g to inv future. 11:55:19 Meeting Mode

Cancel

Save

in innovation and technology clean renewable energy and small business because most of the new jobs will come from small business we also have to make the economy fairer that starts with raising the national minimum wage and also guarantee finally equal pay for women's work i also want to see more companies do profit sharing if you help create

The participants tonight are Donald Trump and Hillary Clinton. This debate is sponsored by the Commission on Presidential Debates, a nonpartisan, nonprofit organization. The Commission drafted tonight's format and the rules have been agreed to by the campaigns. The 90 minute debate is divided into 6 segments, each 15 minutes long. We'll explore three topic areas tonight. Achieving prosperity.

America's direction and securing America. At the start of each segment, I will ask the same lead off question to both candidates and they will each have up to two minutes to respond.

From that point until the end of the segment, we'll have an open discussion. The questions are mine and have not been shared with the Commission or the campaigns. The audience here in the room has agreed to remain silent so that we can focus on what the candidates are saying. I will invite you to applaud, however, at this moment as we welcome the candidates, Democratic nominee for President of the United States, Hillary Clinton, and Republican nominee for President of the United States.

Hosting us.

AI Summary

Mode 5-AI Chat:




Chat with our AI chatbot at any time.

Instructions

Step 1: Select the AI mode at the bottom.

Step 2: Enter your chat content to start the conversation.

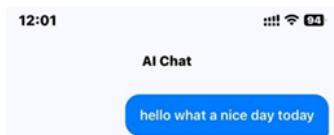

Mode 6- Meeting Records

Automatically records current translation content and generates meeting summaries after translation or live transcription. This mode supports prompt-based summary correction and content sharing.

Instructions

Step 1: Access meeting records from the home page.

Step 2: View historical meeting records from different modes.

Step 3: Tap the top-right corner to share the meeting.

Step 4: Re-enter prompts to generate a new summary.


Step 5: Click to view record details and generate summary content.

Mode 7- Find Earbuds

Step 1: Scroll to the bottom of the home page and tap "Find Earbuds".

Step 2: Allow location permission if using for the first time.

Step 3: If a previous location is recorded, the map will open showing the last recorded location and time.

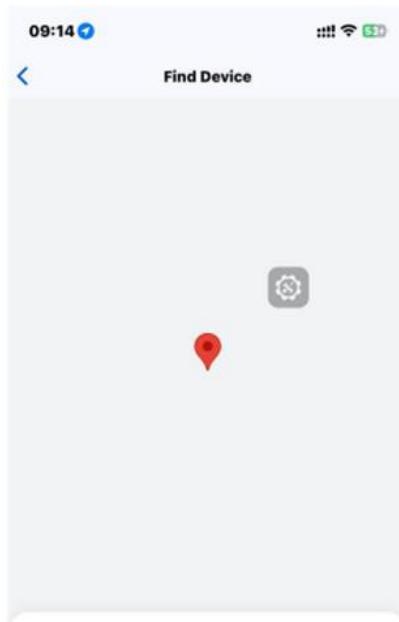


Section 9: Charging

Step 1: Turn off the earbuds before charging.

Step 2: Insert the USB end into the DC 5V charger socket. Connect the Type-C end to the earbud charging case USB C port. The digital display will turn on and flash to show the current power level during charging.

Step 3: Charging takes approximately 1 hour to fully charge the earbuds.

Rated Input: DC 5V – 300mAh

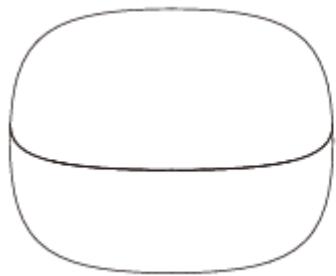

Rated Input:DC5V---300mA

Section 10: Clear Pairing Records

Step 1: Make sure earbuds are turned on and not connected.

Step 2: Double click the left or right headphone 5 times to clear connection and pairing information.

Step 3: After clearing, power off the earbuds

AZPEN PRODUCT LIMITED WARRANTY

Azpen offers a limited manufacturer warranty from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship under normal use for the period of one year from the date of the original retail purchase, Azpen will, at its sole option, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The replacement unit will be covered by the balance of the time remaining on the customer's original limited warranty. This warranty is valid only for the original purchaser and must show proof of purchase.

The warranty does not cover damage, deterioration or malfunction resulting from:

- Accident, misuse, neglect, fire, water, lightning, and deep scratches or signs of impact, or other acts of nature, unauthorized product, modification, or failure to follow instructions supplied with the product.
- Repair or attempted repair by anyone not authorized by Azpen.
- Any damage of the product due to shipment.
- Causes external to the product, such as electric power fluctuations or
- Use of supplies or parts not meeting Azpen's specifications.
- Normal wear and tear and any other cause that does not relate to a product defect.



For more information or to Register online, visit us at:

www.azpenpc.com

Customer service Toll: 1-855-297-3672

Support@azpenpc.com

Monday-Friday

9:00 am – 5:30 pm (CST)

DESIGNED IN USA, MADE IN CHINA